


Multipurpose Electronic Whistle Operating Instructions

1. Operation

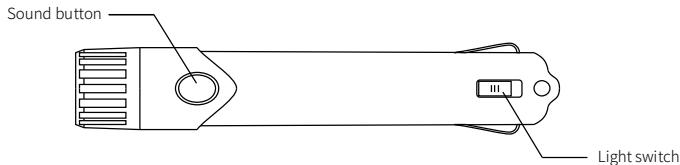


Sound button: Press to beep.

Light switch: Slide the switch to light up the LED.

(Caution: Slide off LED light after use to save power. Sounding whistle and turn on LED together will lower sound level.)

2. Battery installation and replacement

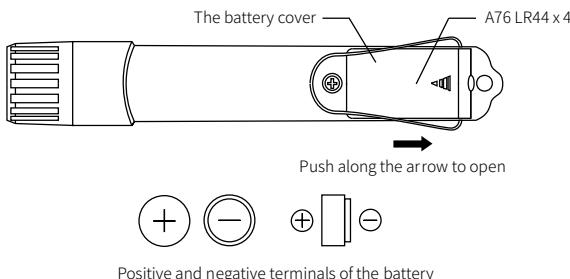

Install the batteries according to the positive and negative ($\oplus\ominus$) in the battery slot.

(Caution: Please check or replace the batteries regularly, and remove the batteries if you expect not to use the whistle for a long time. When the battery power runs low, the sound may be weakened, discontinued or unable to sound.)

Physical dimension:

118*23*20 (mm)

Product use:

Sports (outdoor, sports events), Emergency alert, Rally warning command in public places, Traffic command, Military training, Pet training, etc.

Tips: Griping the whistle around the speaker helps increasing sound volume.

After sales:

Please contact your dealer for any quality problems or questions.

Caution:

This product is not a toy. Do not sound whistle near your ears, it can damage your hearing. Do not allow children to play or use.