

 
# 7 位显示 简易电子秒表 使用说明

## 秒表参数

尺寸：78\*61\*23mm  
重量 58gm  
最大计时：9 小时 59 分 59 秒 99  
计时精度：1/100 秒  
电池：CR2032  
防水等级：IP67

## 功能简介


- 1.分段/单圈计时选择
- 2.显示开关
- 3.自动休眠
- 4.声音开启/关闭

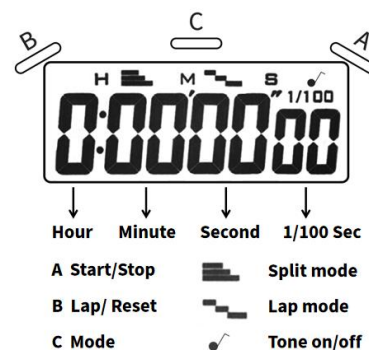

## 计时功能


### 分段计时

按 C 键切换到分段计时模式，按 A 键开始计时，分段计时标示在计时中闪烁。按 B 键截取分段时间。截取分段时间后，分段时间持续显示 10 秒，10 秒后无操作屏幕将切换回计时显示。按 A 键停止计时后按 B 键重置计时。

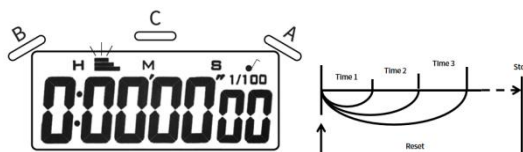

### 单圈计时

按 C 键切换到单圈计时模式，按 A 键开始计时，单圈计时标示在计时中闪烁。按 B 键截取单圈时间。截取单圈时间后，单圈时间持续显示 10 秒，10 秒后无操作屏幕将切换回计时显示。按 A 键停止计时后按 B 键重置计时。

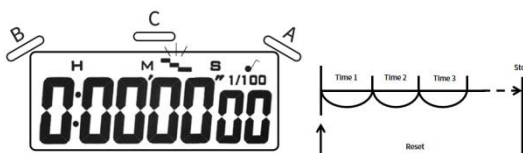

## 自动休眠


在非计时情况下，30 分钟内无操作，屏幕自动熄灭，节省电量。按下任意按键能重新点亮屏幕。

## 显示开关

按住 C 键 3 秒关闭显示去节省电量。按下任意按键能重新点亮屏幕。

## 声音开启/关闭

在屏幕显示 0:00'00"00 情况下，长按 B 键 3 秒，可切换按键声音开启或关闭。

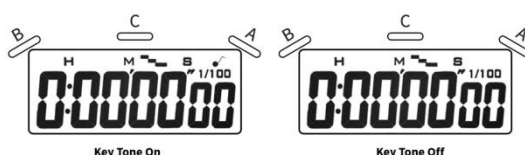


## 电池更换

准备 CR2032 电池、十字螺丝刀和吸水纸，更换电池前请确保秒表内没有积水。

卸下秒表后盖螺丝，拿出按键组后揭开硅胶防水罩，露出电池。若按键组不能轻易卸下，请使用镊子轻轻从侧面撬动按键组，切勿在按键处拉出卸下按键组！使用十字螺丝刀在电池仓缺口轻轻撬出电池，更换上新的 CR2032 电池。清洁硅胶防水罩边缘，确保秒表内罩无毛刺，确保秒表内无积水或液体，小心沿秒表内罩重新盖上硅胶防水罩，盖上后盖重新上紧螺丝。完成电池更换。使用镊子短路电路板[AC]触点可以强制重启秒表。

*\*更换电池需要拆卸防水罩，自行更换可能影响秒表防水效果。建议联系秒表经销商进行电池售后更换。*

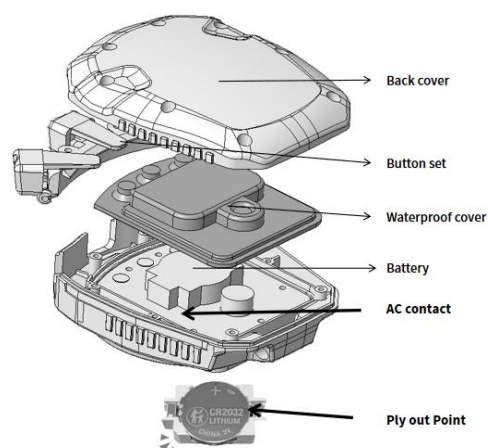

# 7 DIGIT STOPWATCH USER MANUAL

## Specification

Size: 78\*61\*23mm  
Weight: 58gm  
Maximum time: 9:59:59.99  
Accuracy: 1/100 Sec  
Battery: CR2032 or equivalent  
Water resistant: IP67 or equivalent

## Features

- 1.Split/Lap time user option
- 2.Display on/off
- 3.Auto off
- 4.Tone on/off

## Time Measurement

### Split time measurement

Press [C] to switch to Split time mode, press [A] to start. The Split mode sign will flash during split time measurement. Press [B] to record split time. The split time will show for 10 seconds without another press on [B] or [A]. After 10 seconds, the display will automatically switch back to running stopwatch. Press [A] to stop, and [B] to reset the measurement.

### Lap time measurement

Press [C] to switch to Lap time mode, press [A] to start. The Lap mode sign will flash during lap time measurement. Press [B] to record lap time. The lap time will show for 10 seconds without another press on [B] or [A]. After 10 seconds, the display will automatically switch back to running stopwatch. Press [A] to stop, and [B] to reset the measurement.

## Display on/off

Press and hold [C] for 3 seconds to turn off the display for power saving. Press any button to turn on the display again.

## Auto off

The display will go off automatically after 30 min when it is stopped or reset. Press any button to turn on the display.

## Tone on/off

When the display is reset at 0:00'00"00, press and hold [B] for 3 seconds can turn on/off the key tone.

## Battery changing

Please prepare CR2032 battery, cross screwdriver and smooth wiper before battery changing. Ensure no water in the stopwatch during the operation.

Remove the screw on the back cover of the stopwatch. Remove the button set then waterproof cover. If the button set can not remove directly, please use the tweezers ply it out gently. *Do not lift out the button set with the buttons!* Use a tweezers to ply out the battery and replace it with a new CR2032. Use tweezers to short circuit the [AC] pads to reset the start-up logic. Carefully clean the edges of the waterproof cover, align it along the inside edge of the case, re-install the plastic button set and the back cover, then tighten the screws again to complete battery replacement.

- Always go to an authorized service center for battery replacement, as inappropriate dismantling of the waterproof cover may affect the water resistance of the stopwatch.

